



EXPERIENCE THE DIFFERENCE
YOUR SECURITY & SAFETY PRODUCTS

POLICE ARREST GLOVES





Police Arrest Gloves

1. Product pictures




P1: Back of palm



P2: Palm face

2. Function Display Diagram

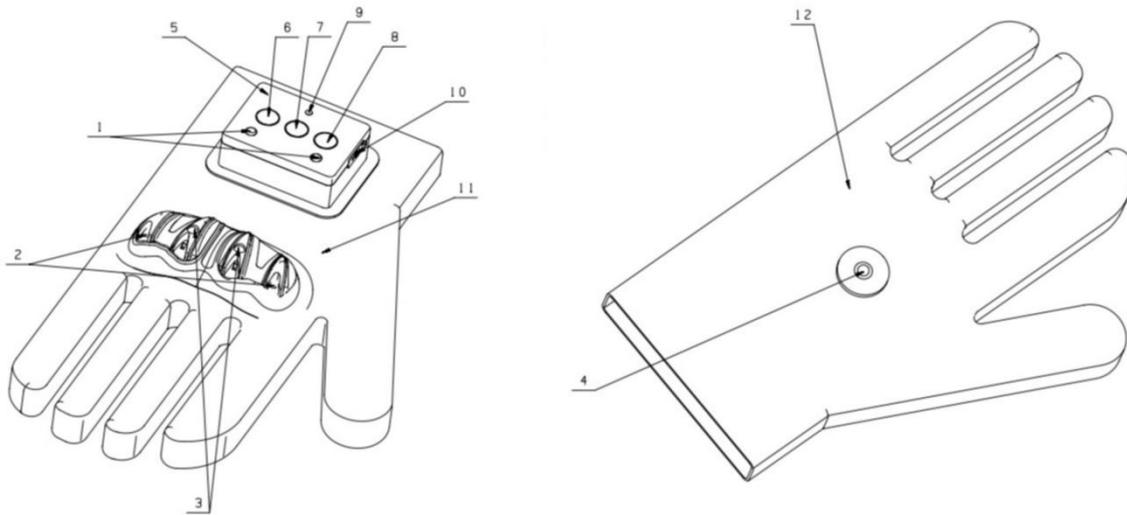

P3: Product appearance

1	LED warning light	5	control box	9	Battery indicator light
2	LED lighting lamp	6	Warning lights, lighting control switches	10	charging port
3	Glass shattered beads	7	Flashing light control switch	11	Hands on the back
4	strobe light	8	Pulse control switch	12	Palm face



3. Applications

(1) Slash-/Cut-Resistant Function

Provides protection against knife slashes and chopping attacks.

(2) Pulse (Electrostun) Function

Delivers a safety-level conductive pulse to the human body to cause intense discomfort.

Pulse module located in the glove fingertip area.

Pulse current: 0.1 mA; high-frequency voltage \leq 170 V.

When applied to the body, it induces strong muscular contraction/spasm without causing fatal injury

(3) Illumination Function

Serves as a temporary light source for operations in darkness, sufficient for writing, reading, and related tasks.

(4) Warning Light Function

Produces alternating red and blue warning lights for visual alerting.

(5) Dazzle (Strobe) Function

Emits high-intensity flashes at 5 Hz, producing temporary, recoverable visual disorientation/flash blindness.

(6) Window-Breaking Function

Uses high-hardness ceramic beads to fracture glass for emergency entry or escape.


4. Technical Parameters

High-Intensity Dazzle Light	3 W, effective at 10 m
Power Input	DC 5V – 1.5A
Battery Capacity	3.7V, 650 mAh
Illumination LEDs	2 × 0.4 W
Warning LEDs	2 × 0.15 W
Charging Method	Type-C charging cable
Dimension	200mm(Long)×150mm(Wide)×50mm(High) 1 pair of symmetrical 2 pieces



5. Operation Guide

- (1) When the battery is fully charged, press the “Warning/Illumination” button once to turn on the warning light. Press again to turn on both the warning light and illumination light simultaneously. Press once more to turn both lights off. This cycle repeats with each press.
- (2) When the battery is fully charged, press the “Strobe” button once to activate the strobe light. Press again to turn the strobe light off. This cycle repeats with each press.
- (3) When the battery is fully charged, press and hold the “Pulse” button for 3 seconds to activate the pulse function; the illumination light will flash simultaneously.
Press once more to turn off the pulse function; the illumination light will return to its previous state.
- (4) A battery status indicator light is installed on the circuit board (with a light guide hole on the control box housing). When the device is powered on, green light indicates fully charged, red light indicates charging required. When powered off, the indicator remains off.
- (5) During charging, the device will remain powered on, and the indicator will show charging status with red/green lights. Disconnect the charging plug, the control box will then enter sleep mode.

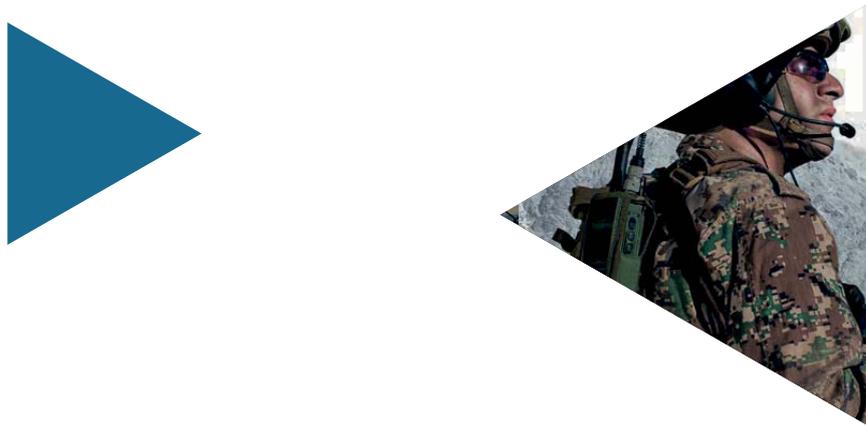

LEARN MORE: c4icommunication.com

FOR MORE INFORMATION: contact@c4icommunication.com or +1 (302)9811340